

 
Technical Information Sheet Timber dunnage

BUILDING STRONGER FUTURES

10/201

1. General purpose dunnage

- ✓ 1st Grade softwood or better no bark.
- √ Square cross-section see Table 1 below for minimum allowable sizes.





&/or





✓ Base dunnage must span full width of trailer for billet, bloom, section, bar, rail, tube etc.




- Overlapping not recommended except in plate loads.
 - Potential for inadequate overlap leading to product dropping through the gap.
 - Provides poor clamping through the load.

Table 1: Minimum timber sizes

	Minimum	Weight
Purpose	size (mm)	@ 2.4m *
Base dunnage for 50 t forklift tines (std)	150 x 150	27 kg
Base dunnage for 50 t forklift tines (thin)	125 x 125	19 kg
Intermediate dunnage spanning large gaps in the load	100 x 100	12 kg
General purpose dunnage	75 x 75	7 kg
Packing timbers - not full width	60 x 60	n/a
Separating plates	50 x 50	n/a
(Placed at an angle to prevent rolling)		

* Based on softwood with 12% moisture content (add 30% for hardwood)

 Double stacked dunnage / rectangular timbers




 Under heavy braking double stacked dunnage and rectangular timbers on end will topple allowing the load to fall; thereby releasing tension in the restraints.



 Similar to double stacked dunnage; top timber will still slide off under heavy / emergency braking.

Grillage

 To raise dunnage, place centrally on shorter bearers. The shorter bearers must be long enough to prevent the main timber from sliding off under emergency braking. Minimum length of short bearers 600 mm. Sufficient short lengths must be placed to support the main timber adequately.

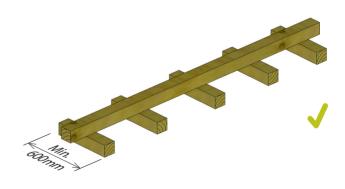


Damaged timbers

· Cracked or worn timbers must be replaced.






 
2. Intermediate dunnage



- Where loading practices allow it, intermediate dunnage should be vertically aligned with the base dunnage.
- 3 m is the maximum span between intermediate timbers to prevent product distortion / timber failure.
 - Note: Some loads will require more timbers e.g. thin plate may require 8 timbers to support a 12 m load.
- When there is a mismatch in stack/bundle heights in a load, packing timbers will be required to ensure the intermediate dunnage is horizontal - options are shown below:

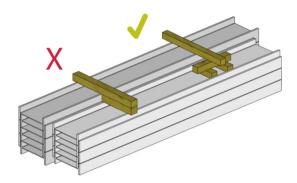


Do not double stack timbers in line, and do not balance timbers on the flanges of beams - create a stable grillage to fill the void.

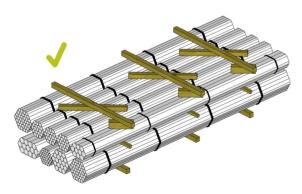

Place packing pieces at an angle to prevent upper timbers sliding off.

  When spanning large gaps, such as universal beams, use 100 x 100 mm minimum intermediate timbers.



BRITISHSTEEL.CO.UK


A | PO Box 1, Brigg Road, Scunthorpe, North Lincolnshire, DN16 1BP E | getintouch@longssteel.com

TIS-0002 Issue 2

• Product should not be placed on overhanging timbers:




 Intermediate dunnage must span the full width of the product below it:

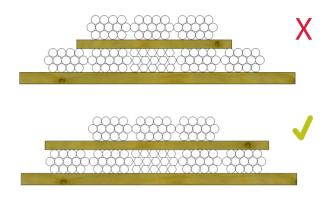

3. Vertical dunnage


• Where chain gaps are required for loading/unloading, vertical dunnage must be used to control these gaps.

See Technical Information Sheet TIS-0007.

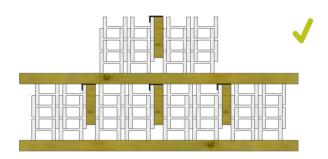

4. Triangular dunnage

  Triangular dunnage is commonly used with round products to prevent rolling during loading/unloading.



- Recommmended 100 x 100 mm min.
- Placed on long edge.









75 x 75mm too small.

Unstable on its short edge.

Care has been taken to ensure that the contents of this publication are accurate, but British Steel UK Limited and its subsidiaries and associated undertakings (having the meaning set out in the Companies Act 2006) do not accept responsibility or liability for errors or information that is found to be misleading.

Copyright British Steel 2016

British Steel UK Limited is registered in England under number 09438207 with registered office at Administration Building, Brigg Road, Scunthorpe, DN16 1BP.